

Special rinse aid

B 170 XD

Neutral, highly concentrated rinse aid to speed drying of plastics

AREA OF APPLICATION:

- Suitable for use in commercial warewashers.
- Especially suitable for wash items made of plastic.
- Especially suitable for wash items made of aluminium and silver.

To achieve a perfect wash result with reusable plastic cups, we recommend using the specially developed Winterhalter system. In addition to the appropriate warewasher and water treatment, which are recommended in all cases, Winterhalter offers a special basket for washing reusable plastic cups (60005502 UC-S, 60005500 UC-M, L, XL). Together with the rinse aid B 170 XD, a perfect wash result and very fast drying is achieved with reusable plastic cups.



DOSAGE:


Via automatic dosing devices, depending on the material of the wash items and the water quality.

To achieve a perfect wash result, the setting of the dosage should be carried out on site by Winterhalter Customer Service.

The volume of the rinse aid does not depend on the water hardness, but on the dishes used.

A dosage of 0.7–0.9 ml/l is recommended for dishes made of plastic. A lower dosage is sufficient for other wash items.

All Winterhalter UC machines from 2018 onwards contain a special programme for plastic wash items in which the recommended dosage is stored.

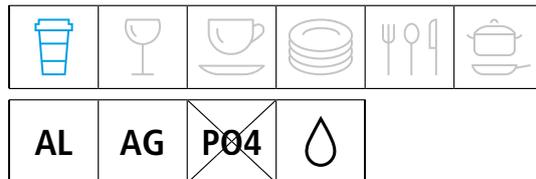

PRODUCT BENEFITS:

- High effectiveness due to highly concentrated formulation
- Spot-free drying of plastic wash items
- Faster drying and stackability of reusable plastic cups

CONTENT MATERIALS:

Non-ionic surfactants, auxiliary agents

The product contains no phosphates.

All Winterhalter products are completely free from NTA and EDTA.

Special rinse aid

B 170 XD

DELIVERY SIZES:

| | |
|------|-----------|
| 1 l | bottle |
| 10 l | container |

TECHNICAL DATA:

| | |
|--------------------|-------------------------------------|
| Colour | colourless |
| Odour | product-specific |
| pH value | approx. 8 (concentrated) |
| Shelf life | 24 months |
| Storage conditions | cool, dark, frost-free, up to 30 °C |
| Density | approx. 1.00 g/cm ³ |

DISPOSAL OF EMPTY PACKAGING:

- Disposal according to local regulations.
- Information on disposal of product residues can be found in the corresponding material safety data sheet.

WICHTIGE HINWEISE:

- Product is not intended for the general public. For commercial use only!
- Storage and transport permissible only in original packaging in upright position. Do not expose to direct sunlight and protect from freezing.
- Never mix with other products and do not transfer into other containers, such as bottles, which are not intended for this purpose!
- Colour variations in the product are caused by raw materials and storage, but do not affect quality.

- The washing parameters should be kept in accordance with the DIN guidelines (DIN 10510 to 10512 and DIN 10522). Information of Working Party of Commercial Dishwashing should be kept in mind. In context refer to: www.akggs.de
- To support the self-cleaning programme of the warewasher, the Winterhalter A 15 MC Cleaning tab is recommended.
- To ensure that the warewasher functions are durable and reliable, all filters should be cleaned at end of operation. To avoid corrosion, leave the machine slightly open so the interior can dry.
- For cleaning and maintaining the stainless steel coverings of the warewasher it is recommended to use Winterhalter C 122 Grease solvent and Winterhalter C 162 Stainless steel polish.
- Product's material safety data sheet and technical data sheet are available on www.winterhalter.co.uk

SAFETY NOTES:

| | |
|--------------------|--|
| H302 | Harmful if swallowed. |
| H315 | Causes skin irritation. |
| H319 | Causes serious eye irritation. |
| P280 | Wear protective gloves/protective clothing/eye protection/face protection. |
| P302 + P352 | IF ON SKIN: Wash with plenty of water and soap. |
| P305 + P351 + P338 | IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. |
| P337 + P313 | If eye irritation persists: Get medical advice/attention. |
| EUH208 | Content 1,2, Benzisothiazol 3(2H) one. Can cause allergic reactions. |
| P501 | Waste disposal according to local regulations. |